



- Screw plug (thermometer mounting and oil filling point)
- 2. Inspection glass 3. Sealing ring for 2
- 4. Sealing ring for 1
- 5. Bearing housing, upper part, drive end
- 6. Cylindrical pin
- Sealing ring, upper half, drive end
 Guide pin to prevent twisting
 Upper bearing shell, drive end

- 10. Oil ring, drive end
- 11. Lower bearing shell, drive end
- 12. Bearing housing, lower half, drive end
- 13. Sealing ring, lower half, drive end
- 14. Taper pin
- 15. Guide pin to fix bolted parts
- 16. Sealing ring for 17
- 17. Drain plug
- 18. Bearing housing, upper part, non-drive end
- 19. Sealing ring, upper half, non-drive end
 20. Upper bearing shell, non-drive end
 21. Oil ring, non-drive end
 22. Lower bearing shell, non-drive end

- 23. Bearing housing, lower part, non-drive end
- 24. Sealing ring, lower half, non-drive end

- 25. Upper adjusting shim, drive end
 26. Sealing cover, drive end
 27. Lower adjusting shim, drive end
 28. Upper adjusting shim, non-drive end
 29. Sealing cover, non-drive end
 29. Sealing cover, non-drive end
- 30. Lower adjusting shim, non-drive end
- 31. Protective cap
- 32. Pressure compensation opening

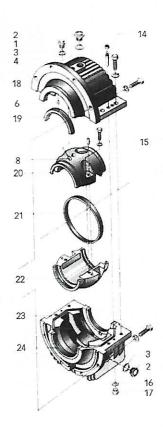

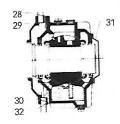

d1 (mm)	80	100	120	150	180	215
d2 (mm)	140	160	170	190	210	245
a (mm)	8	8	10	15	18	22